

SONY.

3-867-539-22

Wireless Keyboard ***for the Sony Internet Terminal***

Operating Instructions



KI-W250

© 1999 by Sony Electronics Inc.

Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and the receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Inserting the Batteries


Open the battery compartment and insert two AA batteries (supplied) matching the + and – on the batteries to the diagram inside the battery compartment. Then replace the battery compartment lid.

Notes

- ☐ If the Wireless Keyboard does not operate properly, the batteries may be weak. When replacing batteries, replace both of them with new ones. For best results, use alkaline batteries.
- ☐ Do not mix old batteries with new ones or mix different types of batteries together.
- ☐ If the electrolyte inside the battery should leak, wipe the contaminated area of the battery compartment with a cloth, and replace the old batteries with new ones. To prevent the electrolyte from leaking, remove the batteries when you don't plan to use the Wireless Keyboard for a long period of time.

Using the Wireless Keyboard

The Wireless Keyboard works as a standard keyboard, and has additional keys designed to work with the Internet Terminal. You can also program the Wireless Keyboard to operate your TV. The function of each key is described below:

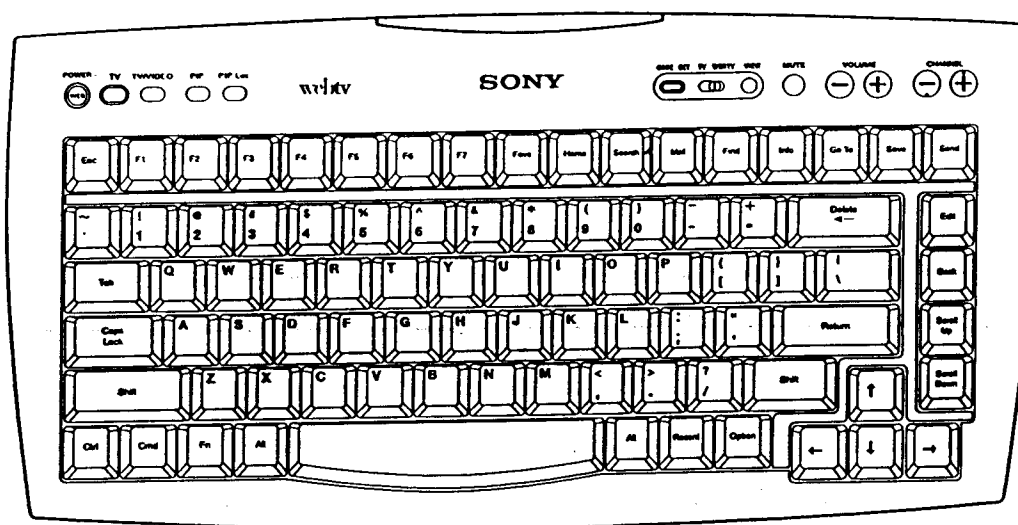

Key	Function
POWER (WEB)	Turn the Internet Terminal on and off.
POWER (TV)	Turn the TV on and off.
TV/VIDEO	Cycle through the video inputs of your TV.
PIP	Open or close a Picture in Picture window (INT-W250 model only).
PIP Loc	Move the location of the Picture in Picture window on the screen (INT-W250 model only).
CODE SET	Program the Wireless Keyboard to control your TV. (See "Programming the Wireless Keyboard" on page 5).
TV/WEBTV Switch	Change the device being controlled by your Wireless Keyboard. Set the switch to TV to control your TV, or to WEBTV to control your Internet Terminal.
VIEW	Change views between TV and the Web.
MUTE	Turn the TV sound on and off.
VOLUME -/+	Adjust the volume.

Key	Function
CHANNEL -/+	Change the channel.
F1-F6	Display the Favorites folders to which you have assigned key shortcuts. Go to your Favorites page in order to assign key shortcuts.
F7	Go to a special Sony page.
Favs	Display the Favorites folders.
Home	Display the Web Home or TV Home page.
Search	Use the Search tool to search for a topic on the Internet.
Mail	Access your mailbox.
Find	Search for a word or phrase within the currently displayed Web page or e-mail.
Info	Access information about the currently displayed Web page.
Go To	Enter an Internet address (URL) and access that address by pressing the Return key.
Save	Save the currently displayed page to your Favorites list.
Send	Send the address of the currently displayed page by e-mail to a person you designate.
Edit	Activate the cursor within a text field.
Back	Return to the previously-viewed screen.
Scroll Up/ Scroll Down	Quickly move up or down on a Web page.
↑/↓/←/→	Move the yellow highlight box to different selectable links.
Options	Display the Options panel.
Recent	Display and access the most recently viewed pages.
Return	Activate a highlighted link or command.

Programming the Wireless Keyboard

The Wireless Keyboard is preset at the factory to operate Sony brand TVs.

If you have a TV other than a Sony brand that you want to control with the keyboard, use the following procedures to program the keyboard.

- 1** Set the TV/WEBTV Switch to TV.
- 2** Find the three-digit code number for your TV from the "Programmable Codes", listed on page 6. If more than one code number is listed, use the number listed first.
- 3** Press the CODE SET button.
- 4** Enter the three-digit code number.
- 5** Press the Return key.

To Check if the Code Number Works:

Aim the keyboard at your TV and press the TV (POWER) button.

If the TV responds, try the CH+ and CH- buttons. If the TV responds, you're done. If the code doesn't work:

- ☐ Try programming the remote using the other codes listed for your TV brand.
- ☐ If you cannot get your TV to respond to the Keyboard- even after trying all the code numbers for your TV- call 1-888-772-7669.

Note

Your TV must have infrared (IR) remote control receiving capability in order to be used with the Wireless Keyboard.

Programmable Codes

TV Codes

Brand	Code No.
Sony	101
Admiral	102, 114, 109, 055
Akai	103, 020, 006
Bell & Howell (Montgomery Ward)	114, 109, 138, 067
Broksonic	103, 112
Centurion	112, 045
Coronado	113, 088, 090
Craig	122, 123, 120, 121, 007, 049, 050
Croslex	111, 030
Curtis Mathes	103, 119, 123, 001, 006, 020, 090, 017, 031
Daewoo	135, 136, 103
Daytron	113, 001, 006, 020
Emerson	122, 113, 120, 121, 123, 103, 115, 088, 001, 090, 050, 083, 019, 030, 081, 020, 006, 025, 055, 023, 036
Fisher	125, 008, 080, 061, 015
General Electric	102, 118, 103, 107, 001, 061, 072, 050, 058, 017, 018, 006 049, 019, 090
Goldstar	103, 113, 112, 130, 088, 027, 001, 037, 010, 011, 042, 090, 039, 040, 092, 099
Hitachi	131, 113, 103, 132, 088, 006 090, 071, 077, 070, 021, 022, 023, 025
JC Penney	103, 102, 130, 107, 091, 092, 017, 020
JVC	128, 129, 060, 016
KTV	133, 113, 103, 123, 134
LXI (Sears)	102, 103, 111, 125, 119, 112 061, 008, 015, 082
Magnavox	111, 112, 113, 103, 025, 088, 061, 006, 090, 012, 098, 092, 100, 082, 020, 017, 103
Marantz	124, 094, 082, 020, 090
Mitsubishi	124, 103, 112, 095, 075, 001, 006, 019, 020, 073, 066, 080, 088

Brand	Code No.
NEC	103, 112, 001, 005, 006, 008, 020, 075, 025
Panasonic	140, 118, 116, 117, 107, 064, 072, 058, 082
Philco	111, 113, 103, 001, 008, 088, 061, 006, 090, 050, 012, 098, 092, 100, 082, 020
Philips	111, 088, 001, 061, 006, 090, 012, 098, 092, 082, 020, 005, 057
Pioneer	137, 118, 119, 065, 026
Portland	103, 108, 088, 006, 090
Quasar	118, 107, 072, 058
Radio Shack	102, 112, 124, 123, 115 050, 092, 025, 090
RCA/PROSCAN	102, 103, 104, 105, 106, 107, 108, 061, 006, 071, 066, 087, 020, 090, 001
Samsung	103, 126, 112, 113, 127, 088, 001, 061, 028, 043, 029, 081, 044, 048, 049, 090, 092, 051
Sanyo	125, 089, 080, 062, 078, 013
Scott	123, 112, 001, 050, 019, 090, 006
Sharp	114, 113, 115, 088, 090, 085, 024, 025, 069
Signature 2000 (Montgomery Ward)	114, 109, 084, 006
Sylvania	111, 112, 103, 001, 061, 006, 012, 098, 092, 020, 100, 082
Symphonic	123, 139, 002, 006, 090, 012, 020
Toshiba	119, 114, 008, 091, 015, 075
Vidtech	131, 103, 112, 006
Wards	113, 103, 115, 112, 088, 001, 090, 006, 036, 017, 018, 089, 080, 050, 039, 023, 078, 064, 055,
Zenith	109, 110, 076, 084, 006

Positioning the Wireless Keyboard

This Wireless Keyboard functions like a remote control. To use the Wireless Keyboard, point it at the remote sensor on the front panel of the Internet Terminal. For best results, the Wireless Keyboard should be used within 30 feet of the Internet Terminal, and at no more than a 45 angle.

Adjusting the Keyboard Legs

To raise the legs on the Wireless Keyboard, use your finger to pry up the adjustable legs on the bottom of the keyboard until you feel them lock into place. To lower the keyboard, push each leg down until it snaps into the closed position.

Troubleshooting

If the Wireless Keyboard is not working properly, and the following remedies do not solve the problem, contact your nearest Sony dealer.

<i>Symptom</i>	<i>Possible Cause and Remedies</i>
The Wireless Keyboard does not operate properly.	☐ Make sure you're using the keyboard within 30 feet of the Internet Terminal, at no more than a 45° angle. ☐ Make sure the batteries are inserted correctly. If the batteries are weak, replace them with new ones. ☐ In rare cases, typing too quickly may cause unexpected results, such as changing the channel on some TVs. This is typically remedied by typing more slowly.

Specifications

Power requirements	Two size AA batteries (included)
Dimensions	12 ¼ × 1 ⅝ × 4 ⅝ inches (309 × 41 × 117 mm)
Weight	Approx. 1 lb, 7 oz (660 g)

Limited Warranty

Sony Electronics Inc. ("Sony") warrants this product against defects in material or workmanship as follows:

1. For a period of one (1) year from the date of purchase, Sony will replace the defective unit with a new or refurbished unit at no charge to you. After this one-year period, you must pay for the replacement unit.
2. To obtain warranty service, you must take the Product, or deliver the Product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, to a service facility authorized by Sony for this purpose. For locations, please call 1-888-772-7669.

This warranty does not cover customer instruction, installation, setup adjustments or signal reception problems.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of, or to any part of the Product. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Sony to service the Product. This warranty does not cover Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses or batteries). This warranty is valid only in the United States. Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service.

This warranty is invalid if the factory-applied serial number has been altered or removed from the Product.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion of incidental or consequential damages, or how long an implied warranty lasts, so the above exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

For your convenience, Sony Electronics Inc. has established a telephone number for frequently asked questions regarding this product: 1-888-772-7669.

Copyright © Sony Electronics Inc. Reproduction in whole or in part without written permission is prohibited. All rights reserved. Sony is a trademark of Sony. WebTV and the WebTV logo are either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries.

Printed in Korea