

PHILIPS MAGNAVOX

webtv

PLUS

**Internet Terminal
MAT972A1
Owner's Manual**

webtv

PLUS



IMPORTANT!

**Return Your Warranty Registration Card
Within 10 Days. See Why Inside.**

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

Once your PHILIPS MAGNAVOX purchase is registered, you're eligible to receive all the privileges of owning a PHILIPS MAGNAVOX product. So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your PHILIPS MAGNAVOX warranty.

Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Congratulations on your purchase, and welcome to the "family!"

PHILIPS MAGNAVOX



Dear PHILIPS MAGNAVOX product owner:

Thank you for your confidence in PHILIPS MAGNAVOX. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS MAGNAVOX "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome—and thanks for investing in a PHILIPS MAGNAVOX product.

Sincerely,

Robert Minkhorst
President and Chief Executive Officer

P.S. Remember, to get the most from your PHILIPS MAGNAVOX product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!

For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. _____ Serial No. _____

Know these safety symbols



This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.



The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.


CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

PHILIPS MAGNAVOX WORLD WIDE WEB address is: <http://www.magnavox.com>

READ BEFORE OPERATING EQUIPMENT SAVE THESE INSTRUCTIONS

This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

1. Read Instructions - All the safety and operating instructions should be read and understood before the appliance is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Water and Moisture - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
6. Carts and Stands - The appliance should be used only with a cart or stand that is recommended by the manufacturer.
 -  **6A.** An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. Power Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.
11. Non-use Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
12. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
13. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
 - A.** The power supply cord or the plug has been damaged; or
 - B.** Objects have fallen, or liquid has been spilled into the appliance; or
 - C.** The appliance has been exposed to rain; or
 - D.** The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E.** The appliance has been dropped, or the enclosure damaged.

Safety Instructions (continued)

- 14. Servicing** - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.



This symbol is to alert you to important operating or servicing instructions that may appear in your owner's manual. When using your telephone equipment, always follow these basic safety precautions in order to reduce the risk of fire, electric shock, and injury to persons.

- 15.** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners; use a damp cloth for cleaning. If the product comes in contact with any liquid, unplug the phone line and the power adapter and let the unit dry thoroughly before plugging it back in.
- 16.** This product should be operated only from the type of power source indicated on the marking label or in the owner's manual. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
- 17.** Do not overload wall outlets and extension cords, as this can result in the risk of fire or electric shock.
- 18.** Never push objects of any kind into this product through cabinet slots, as they may touch dangerous voltage points or short out parts, resulting in the risk of fire or electric shock. Never spill liquid of any kind on the product.
- 19.** To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified serviceman when service or repair work is required. Opening or removing covers may expose you to dangerous voltage or other risks. Incorrect reassembly can cause electric shock when this product is subsequently used.
- 20.** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power supply cord or plug is damaged or frayed; b) if liquid has spilled into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally when you follow the operating instructions (adjust only those controls that are discussed in the owner's manual, as improper adjustment of other controls may result in damage, often requiring extensive work by a qualified technician to restore the product to normal performance); e) if the product has been dropped or the cabinet has been damaged; f) if the product exhibits a distinct change in performance.
- 21.** Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- 22.** Do not use a telephone in the vicinity of a gas leak. If you suspect a gas leak, report it immediately, but use a telephone away from the area where gas is leaking. With a cordless phone, also make sure that the phone base is away from the gas leak.
- 23. Grounding or Polarization** - This product may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace the obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

Federal Communications Commission Information

This equipment complies with Part 68 of the FCC rules. On the back panel of this equipment is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. You must, upon request, provide this information to your telephone company. The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the RENs of all devices connected to one line should not exceed five. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

If your telephone equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But, if advance notice is not practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.

If you experience trouble with this telephone equipment, please contact Philips Consumer Electronics Company repair facility at Philips Service Company, P.O. Box 555, Old Andrew Johnson Highway, Jefferson City, TN 37760, for more information on obtaining service or repairs. The telephone company may ask that you disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

This device is equipped with an RJ11 connector.

Radio Interference Information

CAUTION: Changes or modifications to this equipment not expressly approved by Philips Consumer Electronics Company could void the user's authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Copyright 1997 by Philips Consumer Electronics Company and WebTV Networks, Inc. WebTV, WebTV Network, the WebTV logo, Around Town, LineShare, WebPIP, and Explore are trademarks of WebTV Networks, Inc.; webeye is a trademark of Philips Consumer Electronics Company.

Welcome

Thank you for purchasing the Philips Magnavox Internet Terminal.

Before you use this product to access the Internet, you must first subscribe to the WebTV® Plus Network. Subscribing is easy once you've connected your Internet Terminal.

This manual will help you connect the Internet Terminal and subscribe to the WebTV Plus Network; it also describes the basic features of the Internet Terminal.

The WebTV Plus Network is constantly changing to meet your needs. The screens you see once you're connected to the WebTV Plus Network may look different than the examples used in this manual. The appearance of the WebTV Plus Network will change as new features become available to you.

WebTV Plus Network Features

- ❑ Explore™ - A directory of the most exciting Internet sites.
- ❑ Email (electronic messages) - Exchange messages with members of any Internet service.
- ❑ Search - An easy way to locate information on specific topics.
- ❑ Favorites - Provides instant access to your favorite sites on the Internet.
- ❑ Multiple accounts - Lets members of your household have private email addresses and Favorites folders.
- ❑ Content filtering - Allows you to restrict access to email and sites on the Internet that contain mature material.
- ❑ Program Guide - Provides TV programming information for your area (channel, time, and description of program).
- ❑ WebPIP™ (Picture in Picture) - Enables you to watch TV and surf the Internet at the same time.
- ❑ Around Town™ - Provides weather and entertainment information for your locale.
- ❑ Screen saver - If you do not press any remote control buttons for a few minutes, a screen saver will appear. This reduces the possibility of TV picture tube damage. (If an image remains on a TV screen for an extended period of time, the image may become permanently etched on your TV picture tube.)

Additional Instructions

Additional on-screen instructions are available from the WebTV Plus Network. To access these instructions, go to the Web Home Page. Use the **Arrow** buttons on the remote control to select Using WebTV. Press the **GO** button, then use the **Arrow** buttons to select Instructions.

If you still have questions, call 1-800-GO-WEBTV (469-3288).

Table of Contents

Getting Started	
Safety Instructions	3 - 4
Federal Communications Commission Information	5
Welcome	6
WebTV Plus Network Features	6
Additional Instructions	6
Table of Contents	7
Package Contents	8
Remote Control Battery Installation	8
Back Panel	9
Front Panel	10
Remote Control	11
Connections	
Before You Begin	12
WebTV Plus Network Subscription	12
Usage Requirements	12
Step 1 Connecting an Antenna/Cable TV Signal	13 - 16
Step 2 Connecting to the TV	17 - 18
Step 3 Connecting the Telephone Cord	18
Step 4 Connecting the webeye	19
Step 5 Connecting the AC Power Cord	19
Connecting a Printer (optional)	20
Telephone Options	20
Connecting to the WebTV Plus Network	
Signing Up for the WebTV Plus Network	21
Additional Sign-up Tips	22
Using Your Current Internet Service Provider	22
Basic WebTV Plus Network Information	
Using the On-screen Keyboard	23
Terms You Need to Know	24
Options Panel (WebTV mode)	25
Options Panel (TV mode)	25
Remote Control	
Programming your Remote Control	26 - 27
TV Home Page	28
Web Home Page	29 - 30
Specifications	31
Warranty	32
Index	33
Accessories	36

Package Contents

Make sure you received the following items:

- ☐ Remote control
- ☐ Two AAA batteries (for remote control)
- ☐ AC power cord
- ☐ Telephone cord
- ☐ One video cable (yellow)
- ☐ One set of audio cables (red and white)
- ☐ Telephone-splitter (T-splitter)
- ☐ IR (infrared) Blaster
- ☐ webeye
- ☐ Coaxial cable
- ☐ S-video cable

Additional literature may be included. Additional accessories are available. See page 36 for details.

Remote Control Battery Installation

1


Remove the battery compartment cover by lifting the cover.

2


Insert two AAA batteries as indicated inside the battery compartment.

3

Replace the battery compartment cover.

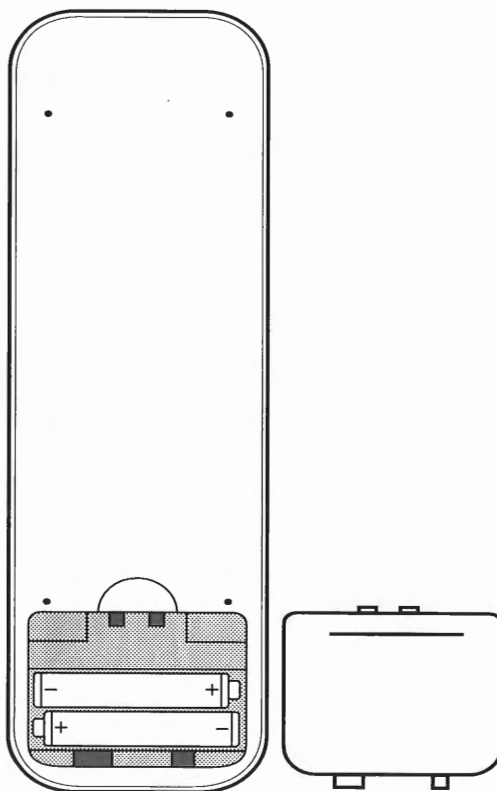

Back Panel

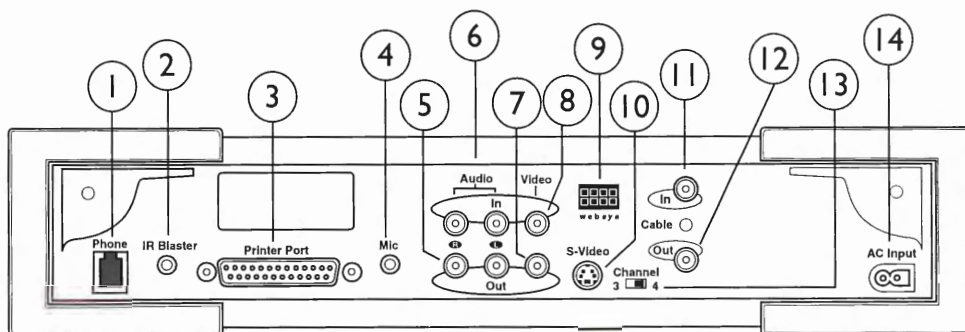

1 Phone jack

Connect one end of the telephone cord to this jack. Connect the other end of the cord to the wall telephone jack.

2 IR Blaster jack

Connect the IR Blaster's cable here. This will allow you to use the remote control to operate a Cable Box.

3 Printer Port

Connect a parallel printer cable to this jack and to a printer (optional).

4 Mic(rophone) jack

Connect a microphone here. When this feature becomes available, select Using WebTV from the Web Home Page for more information.

5 Audio (right and left) Out jacks

Connect the set of red and white audio cables (provided) to these jacks and to the AUDIO IN jacks on your TV.

6 Audio (right and left) In jacks

You may connect a set of red and white audio cables (additional cables not provided) to these jacks and to the AUDIO OUT jacks on your accessory equipment (such as a VCR, if applicable).

7 Video Out jack

Connect the yellow video cable (provided) to this jack and to the VIDEO IN jack of the TV.

8 Video In jack

You may connect a yellow video cable (additional cable not provided) to this jack and to the VIDEO OUT jack on your accessory equipment (such as a VCR).

9 webeye jack

Connect the cable of the webeye here.

10 S-Video jack

Connect an S-Video cable to this jack and to the S-VIDEO IN jack on your TV.

11 Cable In jack

Connect the antenna or the Cable TV signal to this jack.

12 Cable Out jack

If your TV does not have Audio/Video jacks, you may connect a coaxial cable or an RF adapter (not supplied) here to connect the Internet Terminal to the TV.


13 Channel 3/4 switch

When you use a coaxial cable to connect the Internet Terminal to the TV, set this switch to 3 or 4 (your TV Auxiliary In channel). Set the TV to the same channel. (If you experience a lot of interference once you're connected to the WebTV Plus Network, adjust this switch and change the TV channel.)

14 AC Input jack

Connect the AC (120V) power cord here. Plug the other end into the wall outlet.

Front Panel

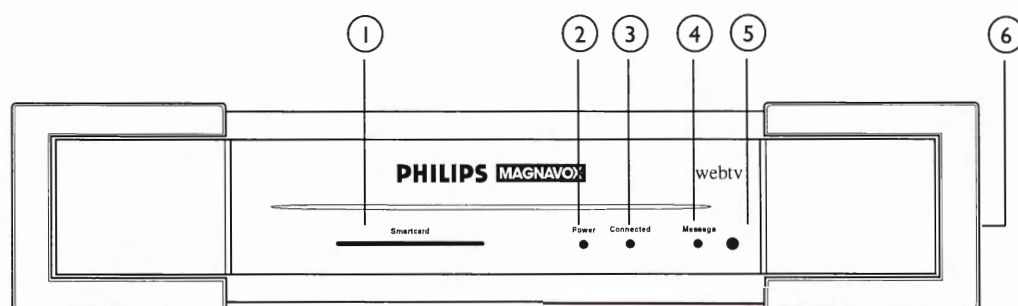

1 Smartcard port

Allows you to use Smartcard technology when it becomes available.
Accessories may be required.

2 Power indicator

Indicates the Internet Terminal power is on.

3 Connected indicator

This indicator flashes when the Internet Terminal is connecting to the WebTV Plus Network. It remains lit while the terminal is in use. It also may flash when you try a different feature or move among sites.

4 Message indicator

Indicates that you have a new email message.

5 Infrared sensor


Allows you to operate your Internet Terminal with the remote control.
When you are not using the webeye, point the remote control at the Internet Terminal. If you are using the webeye, point the remote control at the webeye.

6 Expansion Port (on the side of the unit)

Allows you to use optional accessories that will be introduced in the future.
The port should remain closed when you are connected to the WebTV Plus Network.

Remote Control

- 1 CODE SET button** - Allows you to program the remote control to operate your TV.
- 2 TV MODE button** - Press before pressing other buttons to operate the TV.
- 3 Back (EXIT) button** - Press to return to the previous screen or to remove the on-screen keyboard.
- 4 Arrow buttons** - Press to move the yellow highlight box to a different link on the screen; press to select different keys on the on-screen keyboard.
- 5 HOME button** - Press to display the Web Home Page or the TV Home Page.
- 6 VIEW button** - Press to switch between the Web Home Page and the TV Home Page.
- 7 OPTIONS button** - Press to display an Options panel. There are two Options panels: one for WebTV mode (while accessing the Internet) and one for TV mode (while watching TV).
- 8 MAIL button** - Press to go to the Mail list.
- 9 TV/VIDEO button** - With some TVs, press when in TV mode to select a TV video input (S-Video, Auxiliary In).
- 10 FAVORITES button** - Press to go directly to your Favorites folders.
- 11 RELOAD button** - Press to update the current Internet site.
- 12 VOLUME UP/DOWN buttons** - Press to adjust the TV volume.
- 13 A/CH (Alternate Channel) button** - Press to return to the previous TV channel (when in TV mode).
- 14 POWER button** - Press to turn on the Internet Terminal and to connect to the WebTV Plus Network. Or, press to turn off the Internet Terminal. To turn on the TV, press the **TV MODE** button, then the **POWER** button (if you have programmed the remote control to operate the TV).
- 15 WebTV MODE button** - Press before using the remote control to operate the features of the Internet Terminal.
- 16 GO button** - Activates a highlighted link or command; displays the on-screen keyboard; displays a moveable arrow when the currently displayed page contains an image map.
- 17 SCROLL (Up/Down) buttons** - Moves the Internet page up or down when the page is too long for one screen.
- 18 Number buttons** - Use to change the TV channels.
- 19 ENTER button** - Use when programming the remote control to operate your TV.
- 20 RECENT button** - Displays miniature versions of the WebTV Plus Network sites you've visited recently.
- 21 EXPLORE button** - Takes you to the Explore site.
- 22 CHANNEL UP/DOWN buttons** - Press to change TV channels when using the WebPIP feature or when in TV mode.
- 23 MUTE button** - Press to mute or restore the volume.

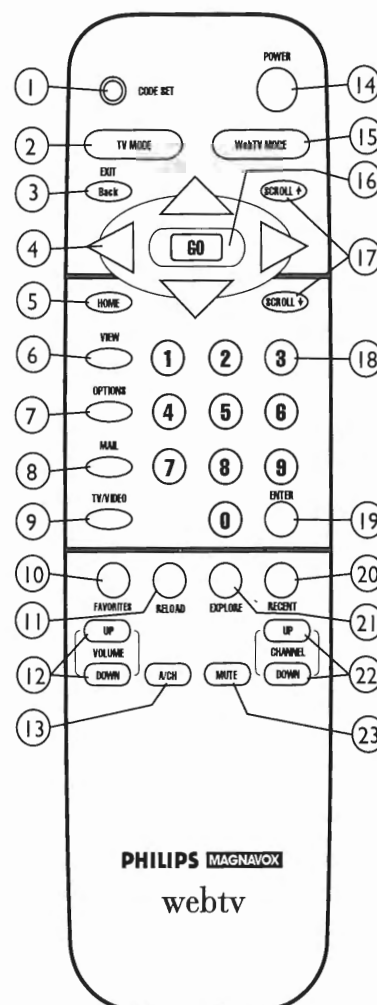

Before You Begin

You probably already have your TV connected to other devices, such as a VCR or a Cable Box. You may need to disconnect some cables before you connect the TV to your Internet Terminal. The Internet Terminal must be the device that is connected directly to your TV.

Please note how your TV is currently connected.

You may use the cables that came with your VCR or Cable Box when connecting the Internet Terminal to these devices. Some connections may require additional cables or adapters.

Before you can connect to the WebTV Plus Network, you must connect your Internet Terminal to each of the following:

- ☐ a Cable TV or antenna signal,
- ☐ your television,
- ☐ a telephone line,
- ☐ and an AC power outlet.

The type of connection you choose depends on whether your TV:

- ☐ has S-Video, Audio/Video, or RF coaxial (combined UHF/VHF antenna or Antenna In) jacks,
- ☐ is connected to a VCR,
- ☐ or is connected to a Cable Box.

WebTV Plus Network Subscription

After you complete these connections, you will subscribe to the WebTV Plus Network, which has a monthly subscription fee. WebTV Plus Network service is not available as a local call everywhere. Toll charges may apply. To see if you have local access, please call 1-800-GO-WEBTV (469-3288).

Usage Requirements


The Philips Magnavox Internet Terminal is to be used solely with the WebTV Plus Network, a subscription-based Internet service operated by WebTV Plus Networks, Inc. (WNI). Access to and use of the WebTV Plus Network is subject to your agreement to WNI's terms of service.

This product contains software licensed from WNI. By opening this package, you agree that you will not modify it.

This product is not to be exported outside of the U.S.A.

Always disconnect from the WebTV Plus Network, then disconnect the power from the Internet Terminal, before changing connections.

Step 1 Connecting an Antenna/Cable TV Signal

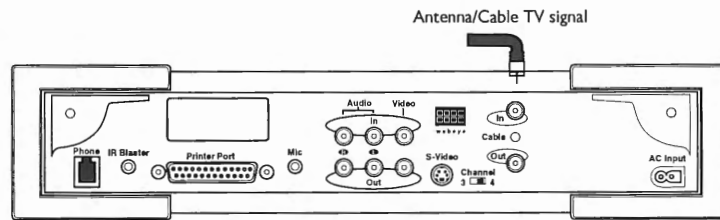


OPTION A

If you have a standard coaxial cable type of antenna or a Cable TV signal, use this option.

Connect the antenna or Cable TV signal to the Cable In jack on the back of the Internet Terminal.

Go to step 2 - Connecting to the TV.

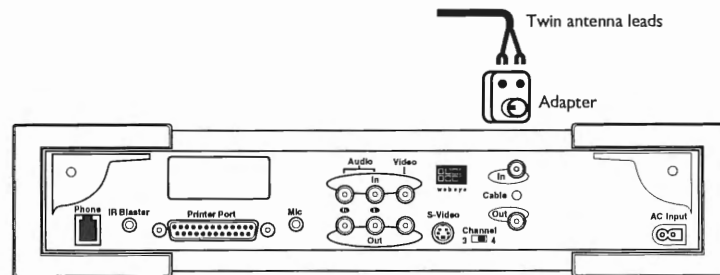

OPTION B


If you do not have a standard coaxial cable type of antenna or a Cable TV signal, use this option. You will need to purchase an adapter (matching transformer) like the one shown above.

Fasten the twin antenna leads (UHF and VHF) to the screws on the adapter.

Connect the adapter to the Cable In jack on the back of the Internet Terminal.

Go to step 2 - Connecting to the TV.

Step 1 Connecting an Antenna/Cable TV Signal (continued)

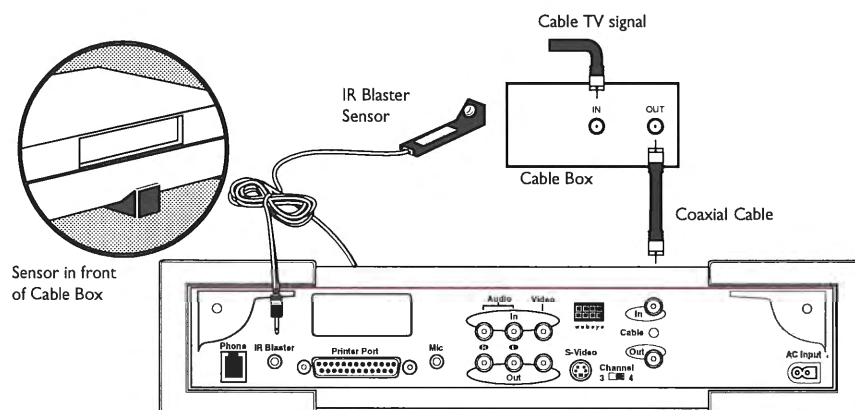

OPTION C

If you have a Cable Box only (no VCR), choose this option.

1

Connect the Cable TV signal to the IN jack on your Cable Box.

2

Connect the Coaxial Cable to the OUT jack on your Cable Box and to the Cable In jack on the back of the Internet Terminal.

3

You may attach the IR Blaster, which allows your Cable Box to tune the channels that you select with the Internet Terminal remote control.


Connect the IR Blaster to the IR Blaster jack on the back of the Internet Terminal. Place one of the IR Blaster's sensors directly in front of the Cable Box's sensor. (Hide the other sensor behind the equipment.) Set your Cable Box to a channel other than channel 9 or 19.

4

The IR Blaster won't be active until you sign up with the WebTV Plus Network. After you sign up, press the **VIEW** button on the remote control to go to the TV Home Page. Use the **Arrow** buttons to highlight Settings, then press the **GO** button. Read the information about the Cable Box to learn how to set up your IR Blaster.

Go to step 2 - Connecting to the TV.

Step 1 Connecting an Antenna/Cable TV Signal (continued)

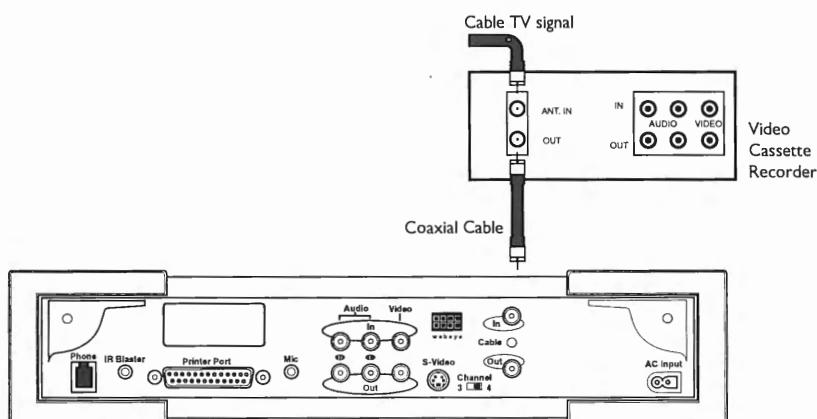

OPTION D

If you have a VCR only (no Cable Box), choose this option.

1

Connect the Antenna or Cable TV signal to the Antenna In jack on your VCR.


2

Connect the supplied Coaxial Cable to the Antenna Out jack on your VCR and to the Cable In jack on the back of the Internet Terminal.

(You may use audio and video cables to connect the VCR to the Internet Terminal instead. See page 9 for details.)

Go to step 2 - Connecting to the TV.

Step 1 Connecting an Antenna/Cable TV Signal (continued)

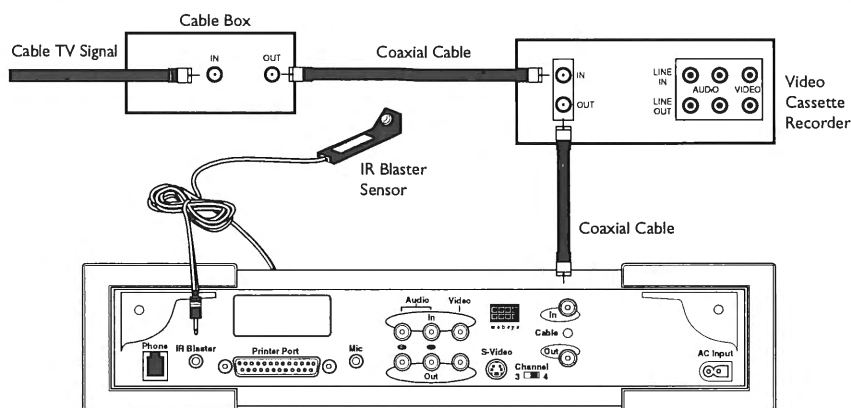

OPTION E

If you are using a Cable Box and a VCR, choose this option.

1

Connect the Cable TV Signal to the IN jack on your Cable Box.

2

Connect a Coaxial Cable to the OUT jack on your Cable Box and to the Antenna In jack on your VCR.

3

Connect a Coaxial Cable to the OUT jack on your VCR and to the Cable In jack on the back of the Internet Terminal.

4

You may attach the IR Blaster, which allows your Cable Box to tune the channels that you select with the Internet Terminal remote control.


Connect the IR Blaster to the IR Blaster jack on the back of the Internet Terminal. Place one of the IR Blaster's sensors directly in front of the Cable Box's sensor. (Hide the other sensor behind the equipment.) Set your Cable Box to a channel other than channel 9 or 19.

5

The IR Blaster won't be active until you sign up with the WebTV Plus Network. After you sign up, press the **VIEW** button on the remote control to go to the TV Home Page. Use the **Arrow** buttons to highlight Settings, then press the **GO** button. Read the information about the Cable Box to learn how to set up your IR Blaster.

Go to step 2 - Connecting to the TV.

Step 2 Connecting to the TV

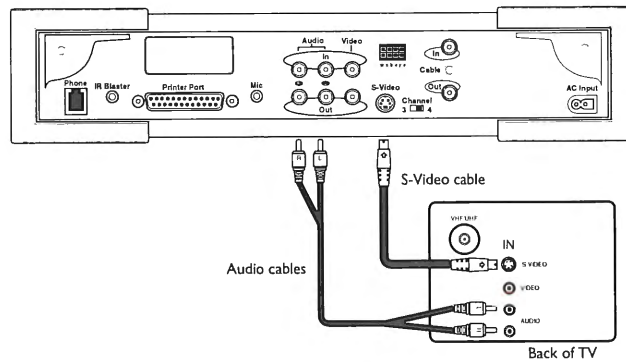


OPTION A

If your TV has an S-Video jack, use this option for the best picture quality.

Connect an S-Video cable to the S-Video Out jack on your Internet Terminal and to the S-Video In jack on your TV. Set the TV to the S-Video In channel. (Refer to the TV owner's manual.)

Connect the set of audio cables (red and white) to the Audio Out R(ight) and L(ef) jacks on the back of the Internet Terminal and to the Audio In jacks on your TV, matching colors. If there is only one audio jack, connect the white plugs.

Go to step 3 - Connecting the Telephone Cord.

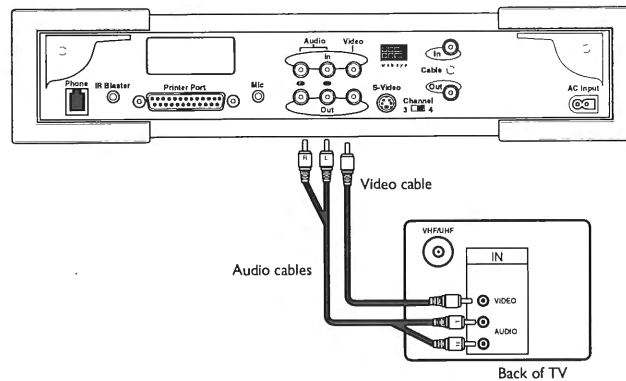

OPTION B

If the TV has a video jack (yellow RCA type), use this option.


Connect the video cable (yellow) to the Video Out jack on the back of the Internet Terminal and to the Video In jack on the TV.

Set the TV to the Auxiliary In or Video In channel. (Refer to the TV owner's manual.)

Connect the set of audio cables (red and white) to the Audio Out R(ight) and L(ef) jacks on the back of the Internet Terminal and to the Audio In jacks on your TV, matching colors. If there is only one audio jack, connect the white plugs.

Go to step 3 - Connecting the Telephone Cord.

Step 2 Connecting to the TV (continued)

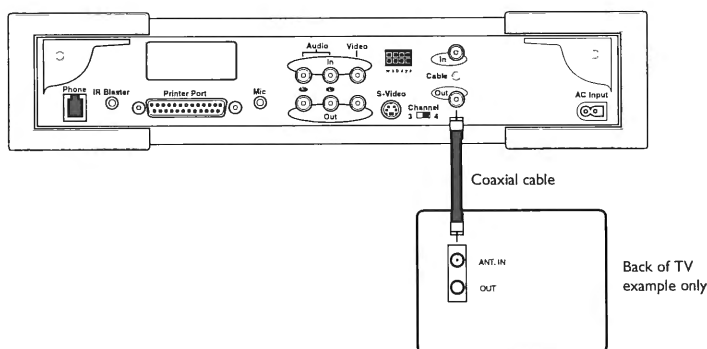

OPTION C

If your TV does not have S-Video or Audio/Video jacks, use this option. Connect the Coaxial Cable to the Cable Out jack on the back of the Internet Terminal and to the (Antenna) In jack (UHF/VHF) on your TV.


Set the TV to the Auxiliary In channel (usually channel 3 or 4). Set the Channel 3/4 switch on the back of the Internet Terminal to the same channel.

Go to step 3 - Connecting the Telephone Cord.

Step 3 Connecting the Telephone Cord


Connect the telephone cord to the Phone jack on the back of the Internet Terminal and to your home's telephone jack.

Use a telephone jack that isn't connected to a telephone. If you have only one telephone jack, plug the T-splitter into the wall telephone jack, then plug your phone into one side and the telephone cord for the Internet Terminal into the other side of the T-splitter.

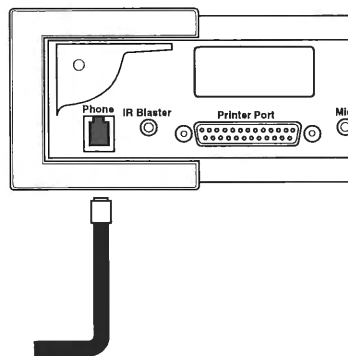

Go to step 4 - Connecting the webeye.

Step 4 Connecting the webeye

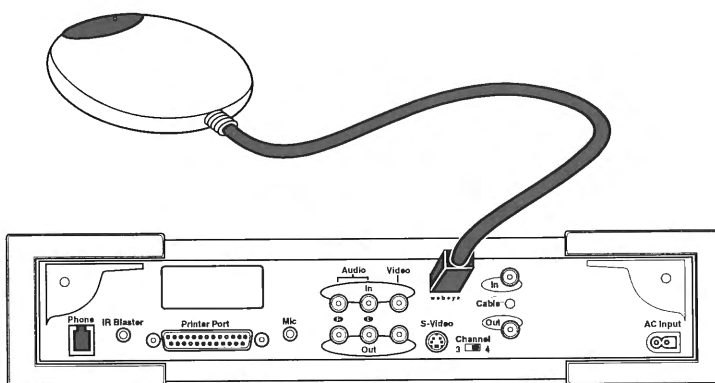


If you want to place the Internet Terminal in a cabinet, or somewhere out of view, use the webeye. Then, point the remote control at the webeye (not the Internet Terminal) in order to control the Internet Terminal.

Connect the webeye cord to the webeye jack on the back of the Internet Terminal. Then, place the webeye in a convenient location, such as on top of the entertainment center.

Go to step 5 - Connecting the AC Power Cord.

Step 5 Connecting the AC Power Cord

Make sure your local AC voltage corresponds to the voltage of the AC power cord (120V) before connecting the Internet Terminal to AC power. If it does not, consult your dealer. Then, connect one end of the AC power cord to the Internet Terminal's AC Input jack. Connect the other end (two-prong plug end) to an AC outlet.

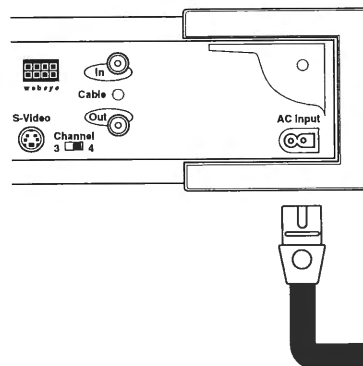

You are ready to connect to the WebTV Plus Network. Instructions are on page 21.

Connecting a Printer (optional)

You may connect a printer to the Internet Terminal. This will enable you to print email messages and Internet pages. To see which printers can be connected to your Internet Terminal, and to learn how to print, select Using WebTV from the Web Home Page, then select Printing.

To connect a printer, follow these steps.

1

Turn off the Internet Terminal and disconnect the power cord.

2

Connect one end of a parallel printer cable to the Printer Port jack on the back of the Internet Terminal.

3

Connect the other end of the printer cable to the connector on your printer (refer to the printer owner's manual).

You will not need to use the software disks that came with your printer. The only software needed to print from your Internet Terminal is provided by the WebTV Plus Network.

Telephone Options

To access or change your telephone options, go to the Web Home Page. Use the **Arrow** buttons on the remote control to select Using WebTV. Press the **GO** button. Use the **Arrow** buttons to select Setup, then press the **GO** button. Information about the following features will be available.

- ☐ Some phone lines require a dialing prefix, such as 9, to make an outside call. You may enter this number if necessary.
- ☐ You can select pulse dialing or tone dialing.
- ☐ If you have Call Waiting, you may receive phone calls while you're connected to the WebTV Plus Network. Your telephone will ring, and you may take the call as you normally do. You may reconnect to the WebTV Plus Network when you're finished with the call and go directly to the page you were visiting when the call was received.
- ☐ Advanced dialing options includes information about voice mail, audible dialing, and dialing speeds.
- ☐ Your Internet Terminal was set at the factory to work for the most common dialing situations. You can reset the dialing options to the factory settings if necessary.
- ☐ To keep your phone line free, your Internet Terminal automatically disconnects from the WebTV Plus Network if you do not use the remote control for several minutes. To reconnect, press the **GO** button.

Signing Up for the WebTV Plus Network

Signing up for the WebTV Plus Network is an easy process that asks you to provide some billing information. You may use the on-screen keyboard to enter the information. If you have trouble signing up, please call 1-800-GO-WEBTV (469-3288).

Before you begin:

- ☐ *Program the remote control to operate your TV. See pages 26 - 27 for details.*
- ☐ *Read the information about the on-screen keyboard on page 23.*

1

Turn on your television.

2

Press the **WebTV MODE** button, then the **POWER** button, to turn on the Internet Terminal and to connect to the WebTV Plus Network. This may take a minute or more.

3

Set the TV to the appropriate Auxiliary In channel. The WebTV Plus Network symbol appears on your TV screen. (If you have not programmed the Internet Terminal's remote control to operate the TV, use your TV remote control to set your TV to the channel reserved for viewing other devices. Refer to your TV owner's manual if you need further details.)

4

The Connecting to WebTV message will appear. (If your unit is having trouble connecting, you may see various messages on-screen. Follow the directions on-screen carefully.)

5

You will see some introductory information. The remaining sign-up screens will ask for the following information.

- ☐ *Name*
- ☐ *Address*
- ☐ *Billing Options (credit card or check)*
- ☐ *Internet name - You will create your own Internet name, which will be your email address. It may contain letters and numbers, but it must start with a letter. It must contain at least three characters, and no more than 15. If you enter an unacceptable name, a message will appear on-screen. Follow the on-screen instructions to continue.*

6

The last screen will contain all the information you entered. After you make sure the information is correct, you're finished!

Additional Sign-up Tips

- The sign-up pages will reappear each time you turn on your Internet Terminal until you complete the sign-up process.
- If you make a mistake, press the **Back (EXIT)** button until the incorrect page appears. Going back deletes the information on the current page. Make the correction, then continue as instructed.
- A screen may appear that asks if you want to update your Internet Terminal with the latest features. Use the **Arrow** buttons to select **Update Now**, then press the **GO** button.

Using Your Current Internet Service Provider


If you already have an account with an Internet Service Provider (ISP), you can use this account to connect to the WebTV Plus Network.

Press the **VIEW** button to go to the Web Home Page. Use the **Arrow** buttons on the remote control to select **Using WebTV**. Press the **GO** button. Use the **Arrow** buttons to select **Instructions**, then press the **GO** button. Information about using your current ISP will be available.

The WebTV Plus Network has thousands of local access points across the country. However, some access points may result in long-distance charges. WebTV Networks is continually adding local access points. For more information about the one nearest you, call 1-800-GO-WEBTV (469-3288).

Using the On-screen Keyboard

Use the on-screen keyboard to type information when an activity requires typing, such as sending an email message. The text box will appear on-screen; the box contains a flashing vertical yellow line, which indicates exactly where you can type.

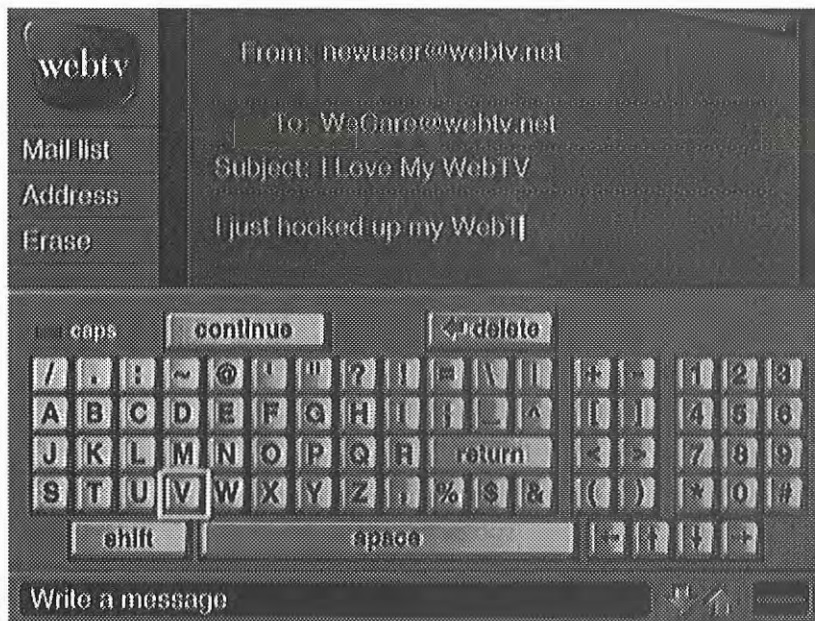

Displaying the on-screen keyboard

1

Use the **Arrow** buttons to select a text box. A vertical yellow line appears inside the box.

2

Press the **GO** button on the remote. The keyboard slides onto your screen. To remove the on-screen keyboard at any time, press the **Back (EXIT)** button.

Typing letters, numbers, and punctuation marks

1

Use the **Arrow** buttons to move the yellow highlight box to a keyboard character.

2

Press the **GO** button on the remote control.

3

Continue moving to other characters, pressing the **GO** button each time, to type your text. When you finish entering text, highlight Continue, then press the **GO** button.

Terms You Need to Know

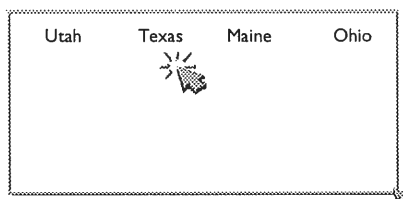


Image map

Areas on a page that can be highlighted are called **links**, because they link you to another page. Links can be words, pictures, icons, or boxes. The WebTV Plus Network finds each link on a page for you when you press the **Arrow** buttons on the remote. To activate a link, use the **Arrow** buttons to highlight a link, then press the **GO** button.

In some instances, the highlight might surround a large area of the page or the entire page. When this happens, an arrow will appear in the lower right corner of the highlight to signify that this is an **image map**.

To activate a link on an image map, press the **GO** button. Another arrow will appear. Use the **Arrow** buttons on the remote to move the arrow to the link you want. Press the **GO** button to access the link.



Page Title

Indicator Arrows

The **Page Title** displays the title of the page currently on your screen.

Indicator Arrows are green when the currently displayed page is longer than your screen. Green arrows indicate the direction or directions in which more of the page can be viewed. Press the **SCROLL (Up/Down)** buttons on the remote to view more of the page.

Options Panel (WebTV mode)

The WebTV mode Options Panel allows you to quickly perform common features of the WebTV Plus Network. Each option is described below.

To use the Options Panel, follow these steps.

1

Press the **OPTIONS** button on the remote control.

2

Use the **Arrow** buttons on the remote control to select an option.

3

Press the **GO** button on the remote control.

- ☐ WebTV Plus - Select to return to the Web Home Page.
- ☐ Find - Select to find a word or a phrase on the current page.
- ☐ Info - Select to display a panel specific to the current page. Information might include the page's address or the time of the page's most recent update.
- ☐ Go to - Select to go to an Internet site by typing its address.
- ☐ Save - Select to save the current page in your Favorites folder.
- ☐ Send - Select to email the current page to someone else.
- ☐ Reload - Select to update the page you are viewing. This is helpful if the page is frequently updated.
- ☐ Hangup - Select to temporarily disconnect from the WebTV Plus Network, make a telephone call, then reconnect to the page you were viewing. This is helpful if your telephone and the Internet Terminal share the same phone line.
- ☐ Print - Select to print. You must have a printer connected to your Internet Terminal.
- ☐ TV window - Select to view TV programming in a small window. This enables you to view TV programming and access the Internet at the same time.

Options Panel (TV mode)

Follow steps 1 - 3 above when in TV mode to access the TV Options Panel. The TV Options Panel includes the following:

- ☐ TV listings - Select to view the current TV program listings.
- ☐ Program Info - Select to access your area's program listings.
- ☐ Remove Channel/Save Channel - Select to add the current channel to your list of Favorite channels. (Your Favorite channels will appear at the bottom of the TV Home Page.)

Programming your Remote Control

You can program the Internet Terminal remote control to operate your TV. It is already programmed to control your Internet Terminal. Your television must be able to receive an infrared (IR) signal from a remote control.

1

Find the three-digit code for your TV from the list of "Remote Control Codes" below. If more than one code is listed, you may need to try several codes before finding the correct one.

2

Press the **TV MODE** button.

3

Press and hold the **CODE SET** button for three seconds.

4

Within 30 seconds, enter the three-digit code for your brand of TV and press the **ENTER** button.

To see if the remote control operates your TV, press the **TV MODE** button, then the **POWER** button. Your television should turn on or off.

Press the **CHANNEL UP/DOWN** buttons. The TV channels should change.

If the remote control does not operate the TV, repeat steps 1-4, using a different code at step 4.


Remote Control Codes

A-Mark	030		087, 119, 213, 307
Abex	059	Clairtone	212
Admiral	120	Concerto	083
Adventura	073	Contec	184, 185, 207, 212
Aiko	119	Craig	207
Akai	057	Crown	066, 207
Alleron	206, 210	Curtis Mathes	057, 066, 087, 181
Ambassador	204	CXC	207
Anam	095, 207	Daewoo	046, 066, 119, 478
Anam National	082	Daytron	046
AOC	030, 046, 057, 079, 212	Dumont	044, 046
Archer	030	Electroband	027, 212
Audiovox	030, 207	Electrohome	408, 416, 436
Belcor	046	Emerson	046, 065, 066, 181, 185
Bell & Howell	043, 181		204, 205, 206, 207, 209
Bradford	207		210, 212, 263, 307, 309, 490
Brockwood	046	Envision	057
Broksonic	030	Fisher	181, 186
Candle	057, 073, 083, 213	Fujitsu	206
Carnivale	057	Funai	198, 206, 207
Carver	081	Futuretech	207
Celebrity	027	GE	048, 054, 056, 074, 078, 082
Citizen	057, 066, 073, 083		162, 201, 205, 306, 309, 478

Programming your Remote Control (continued)

Gibralter	044, 046, 057	Pulsar	044, 046
Goldstar	028, 046, 057, 059 066, 083, 205, 436	Quasar	078, 082, 192, 277
Grunpy	206, 207	Radio Shack	046, 057, 059, 066 074, 083, 181, 192 205, 207, 436
Hallmark	205	RCA	045, 046, 056, 065 074, 117, 162, 201
Harman/Kardon	105	Realistic	046, 057, 059, 066, 083 181, 192, 205, 207
Harvard	095, 207	Rhapsody	210, 212
Hitachi	059, 065, 083, 172 178, 306, 436	Runco	044, 057
Infinity	081	Sampo	057, 059, 066, 079
Janeil	073	Samsung	046, 057, 059, 066, 083 087, 205
JBL	081	Samsux	066
JCB	027	Sanyo	173, 181, 186
JVC	080, 209	Scimitsu	046
Kawasho	185	Scotch	205
Kaypani	079	Scott	046, 205, 206, 207, 263
KEC	207	Sears	042, 074, 081, 083, 173, 176 181, 183, 186, 198, 205, 206
Kenwood	046, 057	Sharp	066, 120, 184, 192, 413
Kloss	051, 073, 105	Shogun	046
KTV	057, 066, 207, 210, 212, 307	Signature	043
Logik	043	Simpson	213, 214
Luxman	083	Sony	027, 038, 107, 138 205, 206, 207, 213
LXI	074, 081, 181, 183, 205	Soundesign	205, 206, 207, 213
Magnavox	047, 051, 055, 057, 081 123, 213, 214, 413, 845	Spectricon	030
Majestic	042, 043	Squareview	198
Marantz	057, 081	SSS	046, 207
Matsushita	277	Starlite	207
Megatron	030, 172, 205	Supre-Macy	073
MEI	212	Supreme	027
Memorex	043, 083, 177, 181, 205	Sylvania	047, 055, 057, 081, 123, 408
MGA	046, 057, 177, 205	Symphonic	198
Midland	044, 059, 066, 074, 078, 162	Tandy	120
Minutz	048	Tatung	030, 082
Mitsubishi	046, 120, 177, 205, 268	Technics	078, 277
Motorola	082, 120	Technol Ace	206
MTC	046, 057, 083, 087, 212	Techwood	030, 078, 083
Multitech	207	Teknika	043, 046, 066, 081, 083, 087 119, 177, 206, 207, 213
NAD	183, 193, 205	TMK	083, 204, 205
NEC	046, 057, 083	Toshiba	087, 176, 181, 183
Nikko	057, 119, 205	Tosonic	212
Noshi	045	Totevision	066
NTC	119	Trical	184
Onwa	207	Universal	054
Optimus	181, 193, 277	Vector Research	057
Optonica	120, 192	Victor	080
Orion	263	Vidikron	081, 269
Panasonic	078, 082, 277	Vidtech	046, 205
Penney	030, 045, 046, 048, 054 057, 059, 066, 074, 078 087, 162, 176, 183, 205	Viking	073
Philco	046, 047, 055, 057, 081, 123	Wards	043, 046, 047, 048, 054, 055 056, 057, 081, 083, 107, 123 138, 192, 201, 205, 206
Philips	081, 845	Yamaha	046, 057
Pilot	046, 057, 066	Zenith	043, 044
Pioneer	065, 193	Zonda	030
Portland	046, 066, 119		
Prism	078		
Proscan	074		
Proton	030, 079, 205		


TV Home Page

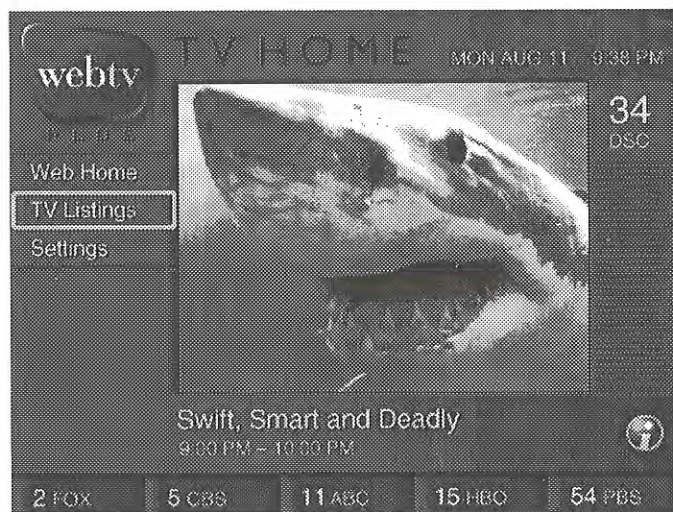

To get to the TV Home Page, press the **VIEW** button on the remote control until the TV Home Page appears.

The following information appears on the TV Home Page:

- ☐ Title and time of current TV program
- ☐ Current Date and Time
- ☐ Programming of the current channel - For full-screen TV viewing, use the **Arrow** buttons on the remote control to select this link, then press the **GO** button.
- ☐ TV Crossover™ Link - To get Internet content for this channel, use the **Arrow** buttons on the remote control to select this link, then press the **GO** button.
- ☐ Favorite Channels - You may compose a list of your favorite channels, then these channels will appear at the bottom of the TV Home Page. Use the **Arrow** buttons to select a channel, then press the **GO** button. The channel you selected will appear on-screen.
- ☐ WebTV Plus Network logo - To go to the Web Home Page, use the **Arrow** buttons to select this link, then press the **GO** button.
- ☐ Web Home - To go to the Web Home Page, use the **Arrow** buttons to select this link, then press the **GO** button.
- ☐ TV Listings - To see TV program information for channels in your area, use the **Arrow** buttons to select this link, then press the **GO** button.
- ☐ Settings - To customize your TV viewing and TV controls, use the **Arrow** buttons to select this link, then press the **GO** button.

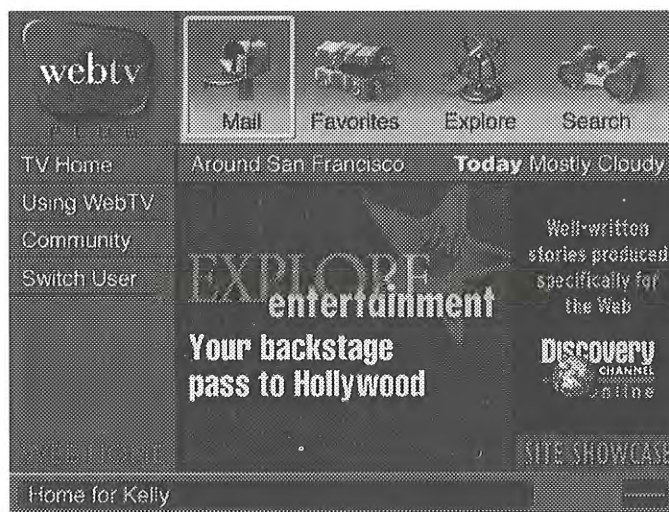

To get to the Web Home Page, press the **VIEW** button on the remote control until the Web Home Page appears.

The following links appear on the Web Home Page:

- ❑ TV Home - To go to the TV Home Page, use the **Arrow** buttons to select this link, then press the **GO** button.
- ❑ Using WebTV - To find more information and instructions about the WebTV Plus Network, use the **Arrow** buttons to select this link, then press the **GO** button. More information will be available about: your WebTV Plus Network account; new features (such as printing); dialing and connecting options; and instructions for WebTV Plus Network features.
- ❑ Community - To access links to Around Town sites or to access on-line communities ("chat rooms"), use the **Arrow** buttons to select this link, then press the **GO** button.
- ❑ Switch User - Use the **Arrow** buttons to select this link, then press the **GO** button, if you want to identify multiple users for your Internet Terminal. Each user may create their own settings for email and Favorites folders and create an individual password.
- ❑ WebTV Plus logo - To get more information about WebTV Plus Networks, Inc., use the **Arrow** buttons to select this link, then press the **GO** button.
- ❑ Mail - Use the **Arrow** buttons to select this link, then press the **GO** button, to go to your Mail list. Your email messages are listed here. To read a message, use the **Arrow** buttons to highlight a message, then press the **GO** button on the remote control. In the Mail list, you may also: address, create, and send email messages; save messages; personalize your mailbox; store and edit email addresses; and delete an email message.

Web Home Page (continued)

- ❑ Favorites - Use the **Arrow** buttons to select this link, then press the **GO** button, to get to the Favorites folders. This is where you store your favorite Internet sites.
To learn how to save a site to your Favorites folders, go to the Web Home Page, then select Using WebTV, then select Instructions.
When the Favorites folders appear on-screen, you may delete items from the folders. To learn how to remove a site or page from your Favorites folders, go to the Web Home Page, then select Using WebTV, then select Instructions.
The first time you access the Favorites folders, additional instructions will appear on-screen.
You may also go to the Favorites folders by pressing the Favorites button on the remote control.
- ❑ Explore - Use the **Arrow** buttons to select Explore, then press the **GO** button. Some of the most interesting sites of the Internet are listed at the Explore site. Select one of the links to go to related pages.
- ❑ Search - The Search feature allows you to search the Internet for information on general and specific topics.
Use the **Arrow** buttons to highlight SEARCH, then press the **GO** button. Use the on-screen keyboard to type a topic in the text box. Use the **Arrow** buttons to highlight SEARCH, then press the **GO** button. A list appears on your screen. Use the **Arrow** buttons to highlight an item of interest, then press the **GO** button.

Specifications

Terminals

- ☐ Phone jack
- ☐ Mic(rophone) jack
- ☐ IR (Infrared) Blaster jack
- ☐ Printer Port
- ☐ Audio In/Out (right and left) jacks
- ☐ Video In/Out jacks
- ☐ webeye jack
- ☐ S-Video jack
- ☐ Cable In jack
- ☐ Cable Out jack
- ☐ AC Input jack

Dimensions

338.6 mm x 77.5 mm x 207.6 mm

Weight

5 lbs. 9.4 oz.

Power requirements

AC 120V

Power consumption

25W maximum

15W standby

Internet Terminal **90 Days Free Labor** **One Year Parts Exchange**

WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

WHAT IS COVERED?

Warranty coverage begins the day you purchase your product. For 90 days from the date of purchase, the Internet Unit will be replaced with a new, repaired, renewed or comparable product (whichever is deemed necessary) if it becomes defective or inoperative. This exchange is done without charge to you.

From 90 days to one year from the date of purchase, your Internet Unit will be replaced with a new, repaired, renewed, or comparable product (whichever is deemed necessary) if it becomes defective or inoperative. You will be responsible for all labor costs. Contact Philips Service Company at 1-888-813-7069 to obtain your cost (labor costs) for exchange.

All products, including replacement products, are covered only for the original warranty period. When the warranty on the original product expires, the warranty on the replacement product also expires.

After one year from the date of purchase, you pay for the replacement of all parts, and for all labor charges.

WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product.
 - installation, performance of, or repair of audio/video cabling, telephone line, or accessory attachments used in accessory ports outside of the product.
 - product replacement because of misuse, accident, lightning damage, unauthorized repair, or other cause not within the control of Philips Consumer Electronics Company.
 - incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.)
 - reception transmission problems caused by signal conditions, telephone line, or cable or antenna systems outside the unit.
 - a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
 - a product used for commercial or institutional purposes. Philips makes no warranty that the access connection will be a local (not long distance) call, or that international dialing connection(s) may be required for usage of the product outside the United States.
- WebTV service is separate and distinct from this product (hardware) warranty.

MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

TO GET WARRANTY SERVICE...

Warranty service will be provided by Philips Consumer Electronics Company. If you believe you need service for your Internet Unit, contact Philips Service Company at 1-888-813-7069. A representative will go through a diagnostic checklist with you. If it is determined that the product needs to be exchanged, you will receive a return authorization number. The representative will give you complete shipping details.

PHILIPS MAGNAVOX SERVICE CONTRACT

Enjoy peace of mind, even after your product's warranty expires. A Philips Magnavox Service Contract protects you from unexpected (and unwelcome) expenses by fully covering the cost of both parts and labor, should a repair be necessary. And, we're there when you need us. You'll receive fast, convenient service with a single phone call, seven days a week. Receiving this protection is simple. Complete and mail your warranty registration card. Or, if you'd like more information, call 1-888-813-7069 today.

TO GET OUT-OF-WARRANTY SERVICE...

Out-of-warranty service can be obtained at a nominal cost for replacement and handling. To obtain out-of-warranty service:

1. Contact Philips Service Company at 1-888-813-7069 to obtain the cost of out-of-warranty exchange for your product.
2. Pack the Internet Unit in a carton suitable for safe shipment.
3. Ship the unit, freight prepaid, to:

Philips Service Company
112 Polk Street
Greeneville, Tennessee 37745

Make sure you write your complete return address on the outside of the carton. Also, include a letter inside the carton describing the problem. Be sure the letter includes your name, address, telephone number, and product serial number. Enclose your money order in the amount quoted to you by the Philips Service Company representative.

4. When your product is received, it will be replaced by a new, repaired, renewed, or comparable product which meets Philips' high quality standards and returned to you by prepaid transportation. You will be responsible for all transportation and shipping costs.

REMEMBER...

Record below the model and serial numbers found on the product. Also, fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary. (The return of the warranty registration card is not a condition for warranty coverage.)

MODEL # _____
SERIAL # _____

This warranty gives you specific legal rights. You may have other rights which vary from state to state. All implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Philips Service Company
P.O. Box 555
Jefferson City, TN 37760
(423) 475-8869

- accessories36
- a/ch button11
- ac input jack9, 19
- arrow buttons11
- audio in/out jacks9, 17

- back (exit) button11, 23
- battery installation (remote)8

- cable in/out jacks9, 13 - 16, 18
- channel 3/4 switch9, 18
- channel up/down buttons11
- code set button11, 26
- connected indicator10
- connections13 - 20
- content filtering6

- dimensions31

- email6, 23, 29
- enter button11, 26
- expansion port10
- explore6, 30
- explore button11

- favorite channels28
- favorites button11, 30
- favorites folders30
- fcc information5
- find option25

- go button11
- go to option25

- hangup option25
- home button11

- image map24
- index33
- indicator arrows24
- info option25
- infrared sensor10
- instructions (on-screen)6
- ir blaster jack9, 14, 16

- limited warranty32
- links24

- mail button11
- mail list29
- mail option29
- message indicator10
- mic(rophone) jack9

- number buttons11

- on-screen keyboard23
- options button11
- options panel25

- package contents8
- page title24
- phone jack9, 18
- power button11
- power consumption31
- power indicator10
- printer port9, 20

- recent button11
- reload button11
- reload option25
- remote control8, 11, 26 - 27

- safety information3 - 4
- save option25
- scroll (up/down) buttons11, 24
- search6, 30
- send option25
- smartcard port10
- specifications31
- s-video jack9, 17

- table of contents7
- telephone connections18, 20
- tv connections17 - 18
- tv mode button11
- tv/video button11

- video in/out jacks9, 17
- view button11, 28, 29
- volume up/down buttons11

- webeye19
- webeye jack9, 19
- webtv mode button11

The following accessories are packed with your Internet Terminal. These accessories are provided to help you use or set up your Internet Terminal.

If any of these items are not included, or if you need to replace an accessory, contact Philips Service Company at the address listed below.

- ☐ Remote control
- ☐ Two AAA batteries
- ☐ AC power cord
- ☐ Phone cord
- ☐ One video cable
- ☐ One set of audio cables
- ☐ T-splitter
- ☐ IR (Infrared) Blaster
- ☐ webeye
- ☐ Coaxial cable
- ☐ S-video cable

The Infrared Keyboard (model number MWKI22BK) is not included with your product, but is available from Philips Consumer Electronics Company. Use this keyboard to type information on-screen without having to access the on-screen keyboard.

To order a keyboard, contact Philips Service Company at the address listed below.

To order an accessory, write to:
Philips Service Company
P.O. Box 967
Greeneville, TN 37744-0967.
Or, call 1-888-813-7069.