

TV/WB/FM/AM
Portable CD Player

Operating Instructions



 
D-FJ210

Sony Corporation ©2002 Printed in China

<http://www.sony.net/>


“WALKMAN” is a registered trademark of Sony Corporation to represent Headphone Stereo products. **WALKMAN** is a trademark of Sony Corporation.

CD player (front)

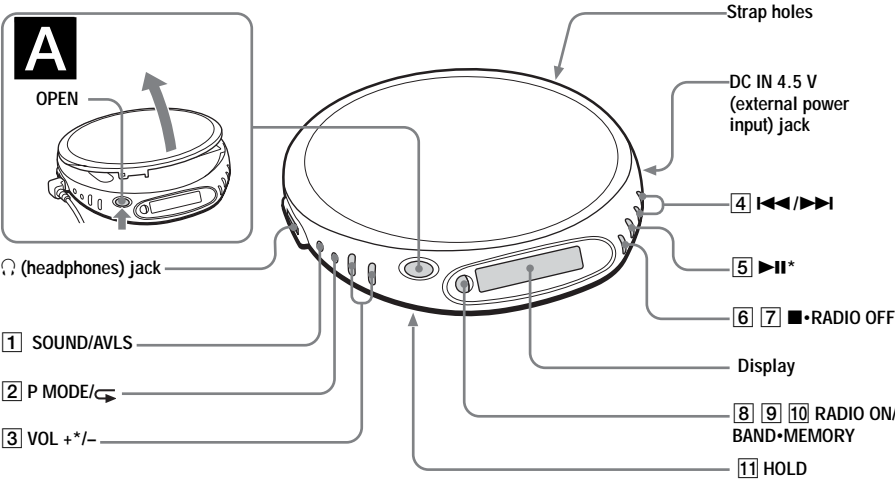


*The button has a tactile dot.

 CD player (inside)

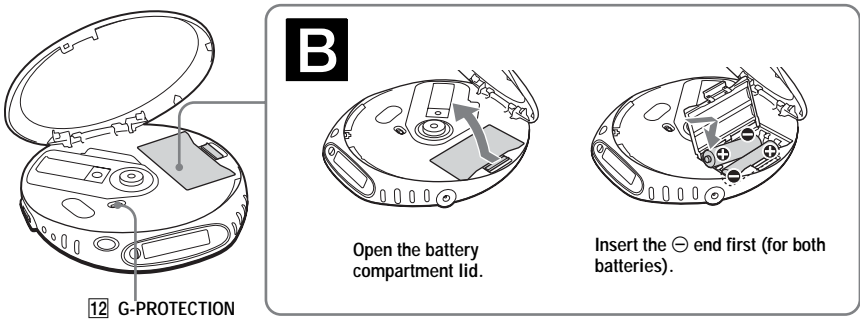

Remote control

 
Display on CD player

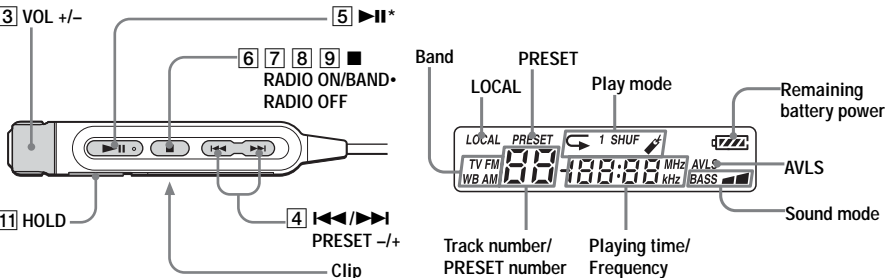

*The button has a tactile dot.

Note

 Use only the supplied remote control. You cannot operate this CD player with the remote control supplied with other CD players.

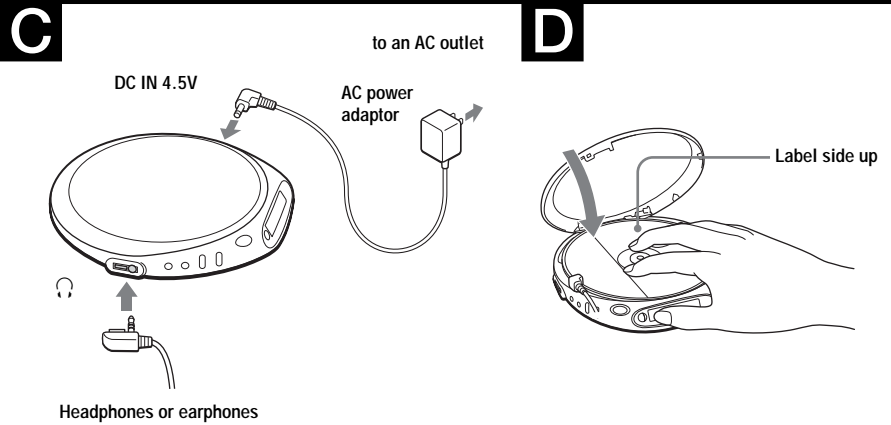

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

CAUTION

The use of optical instruments with this product will increase eye hazard.

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

CAUTION

- INVISIBLE LASER RADIATION WHEN OPEN
- DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENT

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

Owner's Record

The model number and the serial number are located at the rear of the CD player. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.
Model No. D-FJ210
Serial No. _____

For the customers in the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
– Reorient or relocate the receiving antenna.
– Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
– Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

If you have any questions about this product, you may call: Sony Direct Response Center 1-(800)-222-7669 or write to: Sony Direct Response Center 12451 Gateway Blvd. Fort Myers, FL 33913

Declaration of Conformity

Trade Name: SONY
Model No.: D-FJ210
Responsible Party: Sony Electronics Inc.
Address: 680 Kinderkamack Road, Oradell, NJ 07649 USA
Telephone No.: 201-930-6972

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product registration

For the customers in the USA

Please register this product on line at www.sony.com/productregistration.
<<http://www.sony.com/productregistration>>

Proper registration will enable us to send you periodic mailings about new products, services, and other important announcements. Registering your product will also allow us to contact you in the unlikely event that the product needs adjustment or modification. Thank you.

Power Sources

To use the AC power adaptor (C)

- 1 Connect the AC power adaptor (not supplied) to an AC outlet.

To use the batteries (B)

Use only the following batteries for your CD player:

Dry batteries

- LR6 (size AA) alkaline batteries

To insert the batteries

- 1 Open the battery compartment lid inside your CD player.
- 2 Insert two batteries by matching the + to the diagram in the battery compartment and close the lid until it clicks into place.

Battery life* (approx. hours)


(When the CD player is used on a flat and stable place.)
Playing time varies depending on how the CD player is used.

| | G-PROTECTION ON | OFF | RADIO ON |
|----------------------------------------------------------|--------------------|-----|-------------|
| Two Sony alkaline batteries LR6 (SG) (produced in Japan) | 40 | 36 | 70 |

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association).

To check the remaining power of the batteries

 You can check it in the display.
Replace the batteries when “ ” flashes.



Notes

- The indicator sections of roughly shows the remaining battery power. One section does not always indicate one-fourth of the battery power.
- Depending on operating conditions, the indicator sections of may increase or decrease.

Notes on using the dry batteries

- Be sure to remove the AC power adaptor.
- When the batteries are depleted, replace both batteries with new ones.

Playing a CD

To insert a CD

- 1 Press OPEN to open the lid (A).
- 2 Fit the CD to the pivot, then close the lid (B).

Notes

- This CD player can play CD-Rs/CD-RWs recorded in the Compact Disc Digital Audio (Audio CD) format, but playback capability may vary depending on the quality of the disc and the condition of the recording device.
- This product is designed to play back discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

To operate the CD player

| Button/Switch | Function/Operation |
|------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 SOUND/AVLS*1 | • Use to emphasize the bass-boosted sound. Press repeatedly to select BASS or BASS . BASS enhances more than BASS .*2 • Also use to keep down the maximum volume to protect your hearing. Press and hold until “AVLS” appears in the display. The AVLS function is turned on. To turn off the AVLS function, press and hold again until “AVLS” disappears. |
| 2 P MODE/REPEAT (play mode/repeat) | For CD player: Press repeatedly until the play mode you want appears in the display. No indication: Normal play “1”: Single play “SHUF”: Shuffle play “”: Bookmark track play To repeat the play mode you selected, press and hold until “” appears. For radio: Press to switch the tuning mode and the preset mode. |
| 3 VOL +/- | Press to adjust the volume. |
| 4 FASTER/REVERSE (AMS*3/search) (FASTER/REVERSE) PRESET-/+ | For CD player: Press or once to find the beginning of the current/next track. Press or repeatedly to find the beginning of the previous/succeeding tracks. Press and hold or to go backward/forward quickly. For radio: Press to tune in the station you want. Also press to select the preset station you want. |
| 5 PLAY/PAUSE (play/pause) | Press to start play. Press again to pause play. To play from the first track, press for 2 seconds or more while the CD player is stopped. |
| 6 STOP | Press to stop playing. |
| 7 RADIO OFF | Press to turn off the radio. |
| 8 BAND | Press to change the band. |
| 9 RADIO ON | Press to turn on the radio. |
| 10 MEMORY | Press and hold to enter the preset mode. Also press to store the station in memory. |
| 11 HOLD | Use to lock the controls to prevent accidental button presses. |
| 12 G-PROTECTION | Set it to ON to protect against sound skipping.*4 |

*1 AVLS = Automatic Volume Limiter System
*2 If the sound is distorted when using the SOUND function, turn down the volume.
*3 AMS = Automatic Music Sensor
*4 Sound may skip:
– if the CD player receives stronger continuous shock than expected,
– if a dirty or scratched CD is played or
– when using poor-quality CD-Rs/CD-RWs or if there is a problem with the recording device or application software.

